

Programming the RV lock

A. Setting a New Keypad Code:

1. Using a sharp tool (ballpoint pen, paper clip, toothpick) press and hold the “code reset” hole on the back plate for about 10 seconds until the lock makes a ‘beep’ sound. The keypad should light up.
2. Enter your new code (4-8 digits) then press the lock button.
3. Re-enter the new code, then press the lock button again. A long confirmation beep sound from the keypad confirms that the programming has finished successfully. The keypad light should go off.

B. Programming the Remote Control:

Turn the ON/OFF switch to ON. There are two holes on the back handle. Press the hole marked ‘FOB learn’ with a sharp pointed tool (ballpoint pen), until it makes a short ‘beep’ sound, (about one second), then release, then press the lock button on the remote control until the lock makes a long ‘beep’ sound, which confirms it is programmed successfully. Remote control distance is within 15 metres.

To remove any previous synced remotes, hold down the ‘Learn’ button for 10 seconds until you hear a ‘beep’.

Changing the ‘Beep’ Noise

To remove the ‘beep’ noise, press and hold the ‘1’ key until you hear two short tones.

To reinstall the ‘beep’ noise, press and hold the ‘1’ key until there is one beep.

Quick-Lock Feature

To lock with one action, hold down the lock button for two seconds until you hear the locking beep.

Notes:

Batteries should last about six months depending on the actual usage. If you hear short tones after you input the code and before the deadbolt is activated, it indicates that the batteries are getting low and need to be changed.

Changing the batteries does not erase any codes or remote programming.

If not using the remote fob you can save the battery life by switching the off/on switch to ‘off’ on the back plate. If not using the keyless lock for long periods, remove the batteries.

Power supply: 4 x 1.5V AA battery