

Programming the RV Type A2 lock

A. Setting a New Keypad Code:

Press and hold down the '8' button and then the lock button until you hear a confirmation beep sound. This indicates that lock has entered the programming mode.

Enter the default code "1234" and press the lock button. If the lock operates after doing this it means the lock has not entered the programming mode. Repeat the first step until the lock goes into programming mode.

Type in your new code (4-8 digits) then press the lock button.

Type in the new code (4-8 digits) again and press the lock button; a long confirmation beep sound from the keypad confirms that the programming has finished successfully.

Test the new code.

Alternative method:

Using a sharp tool (ballpoint pen, paper clip, toothpick) press and hold the "code reset" hole on the back plate for about 10 seconds until the lock makes a 'beep' sound. The keypad should light up. If you hear 5 beeps it is **not** in programming mode. Try again.

Enter your new code (4-8 digits) on the keypad then press the lock button.

Re-enter the new code, then press the lock button again. A long confirmation beep sound from the keypad confirms that the programming has finished successfully. The keypad light should go off.

Test the new code.

B. Programming the Remote Control:

Turn the ON/OFF switch to ON. There are two holes on the back handle. Press the hole marked 'Learn' with a sharp pointed tool (eg. ballpoint pen), and hold in, at the same time pressing the lock button on the remote control until the lock makes a long 'beep' sound, which confirms it is programmed successfully.

To remove any previous synced remotes, hold down the 'Learn' button for 10 seconds until you hear a 'beep'.